


Hardware Kit

The hardware kit consists of at least two of the following (if applicable):

1. Z-clip hangers
2. Clips (Note: Clips for bottom of board are punched with slotted holes for wall, and non-slotted hole for bottom of board) and #8 screws

The quantity of each item will vary with board size.

Screws and hardware to attach hangers, and clips if applicable, to the wall should be appropriate for the type of wall construction and are to be supplied by the installer.

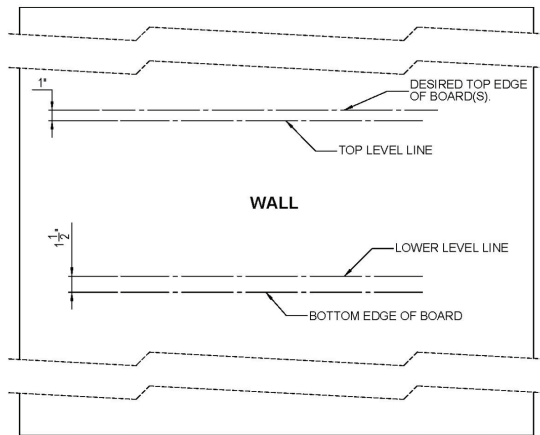

Layout

1. Measure approximately 1" down from desired top edge of board on wall.
2. Strike a level line at this location long enough to mount all boards to be hung at this level.

INSTALLATION – Mounting Hangers

Note: Make sure wall is level and plum, shimming where necessary to make sure all anchor points are in line and level.

1. Using screws and necessary anchors appropriate for the type of wall construction, mount the top z-clips to the wall along the top level line as shown below. The clips should be evenly spaced such that they will be located inside the trim of the board being installed. (Screws and anchors not included.)
2. Hang the board with the Z- clips and strike a line at the bottom of the board, remove board from wall and using screws and necessary anchors appropriate for the type of wall construction, mount the bottom of your clips on the line. Mount first clip 3" in from edge of board and every 2'.

