




Bulletin & Directory Board Cabinets Installation Instructions

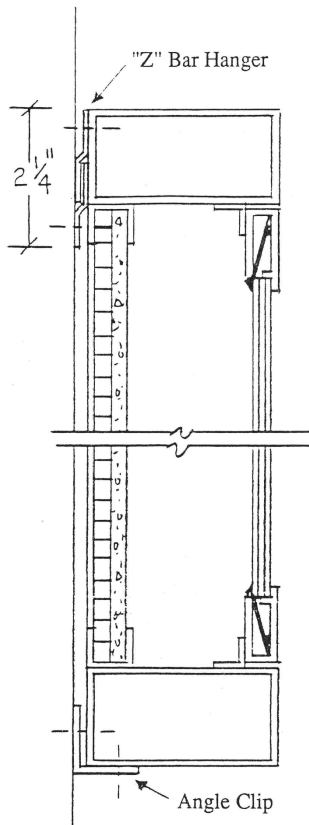

1. Layout and identify all parts.
2. Select desired height cabinet is to be mounted.
3. Fasten Z-bar hangers to wall per drawing A-A with suitable fasteners (not furnished) approximately 2'0" O.C.
4. Fasten angle clips to wall per drawing A-A with suitable fasteners (not furnished) approximately 2'0" O.C. (Slotted hole goes to wall.)
5. Hang case on "Z" bar hangers and fasten at bottom to angle clips per detail A-A with screws furnished. Case is now ready to use.

NOTE: Drawing for illustration of mounting hardware only. Profile of cabinet ordered may vary. Can be either wood or aluminum.

