


MIX Markerboard Assembly Instructions



MIX Unit Assembly

1. Mark the wall for the desired height of the unit
Note: Hangers are inset 3" from each outside edge of the units
2. Measure 4 1/2" down from that mark and mark a level line on the wall for the bottom of the hanger. Insert the appropriate wall anchors (by others)
3. Measure down from the desired board height to the top of the 2nd and 3rd hanger, add 2 3/4" to each measurement and strike horizontal lines on the wall.
4. Mount the z-bars on the wall, with the bottom of the z-bar on the line.

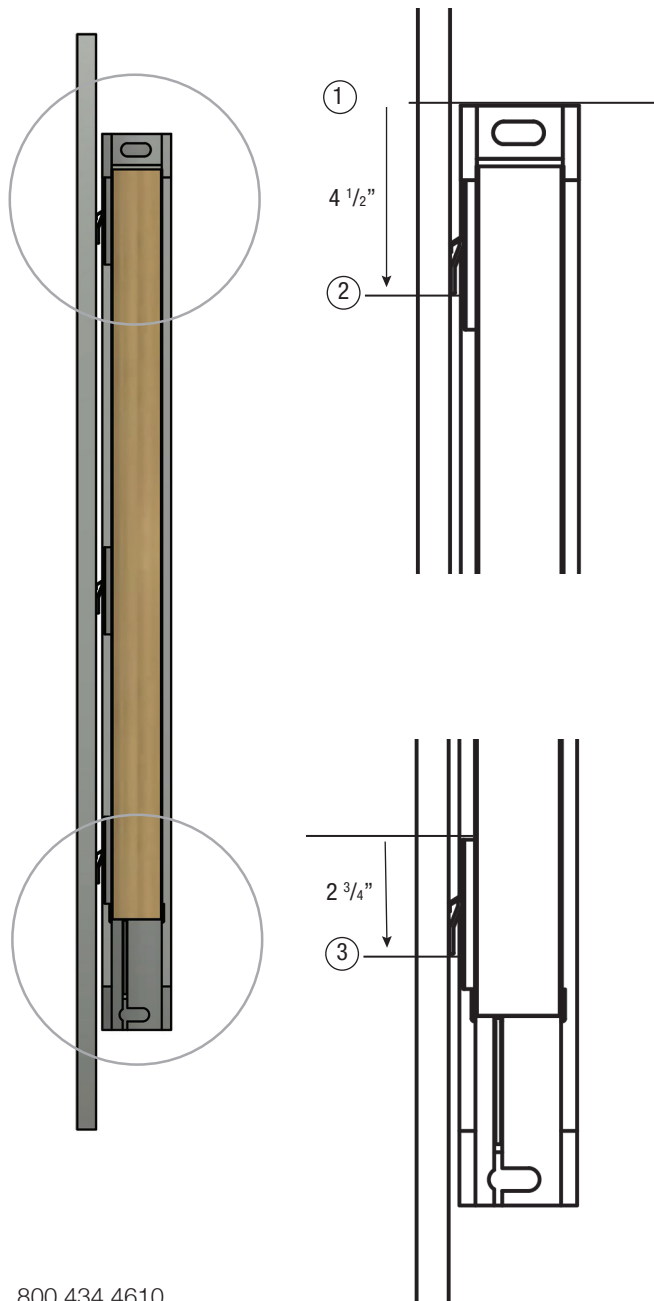

800.434.4610
claridgeproducts.com