




## Bulletin Board Cabinets

Contemporary  
Large Contemporary  
Classic  
Revere  
Imperial

### INSTALLATION INSTRUCTIONS

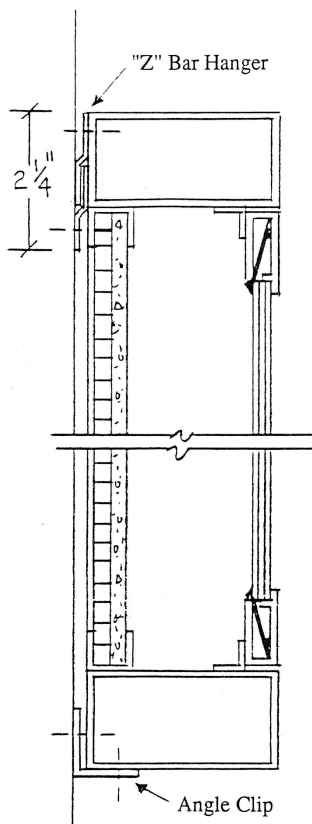

1. Layout and identify all parts.
2. Select desired height cabinet is to be mounted.
3. Fasten Z-bar hangers to wall per drawing with suitable fasteners (not furnished) approximately 2'0" O.C.
4. Fasten angle clips to wall per drawing with suitable fasteners (not furnished) approximately 2'0" O.C. (Slotted hole goes to wall.)
5. Hang case on "Z" bar hangers and fasten at bottom to angle clips per detail with screws furnished. Case is now ready to use.

Drawing for illustration of mounting hardware only. Profile of cabinet ordered may vary.

#### WARNING

Risk of injury to installers and users

Read the entire assembly directions before beginning assembly.



800-434-4610  
claridgeproducts.com