




## EZ Fit LCS Panels




### INSTALLATION INSTRUCTIONS

---

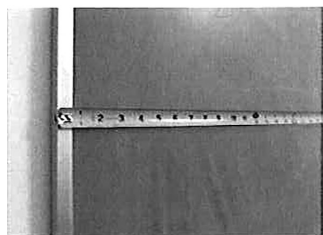

#### Step 1

Measure portion of board to be covered - including trim. Measure from side to side and from top of trim to top of tray. (Some installations may require measuring inside trim and/or from bottom of rail to top of tray; shy by approx. 1/16" to 1/8").

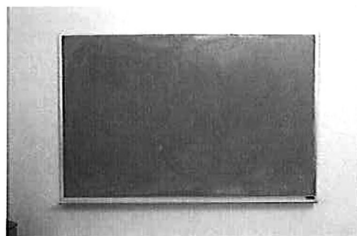

#### Step 2

Clean surface of existing board as well as the trim. Adhesive will be required, either troweled on or in golf ball sized globs depending on the depth of the trim.



#### Step 3

Position dual lock tabs/discs directly inside perimeter trim on the face of the existing board and add adhesive to the back of the new EZ Fit Panel. Shimming of dual locks may be required to ensure contact with the new EZ Fit Panels. Pull protective tape cover off of dual lock tabs to ensure they stick together.



#### Step 4

At this point, place new EZ Fit Panel in pre-determined location being careful to line up trim. Press new panel onto the surface of the old board. Allow 24 hours for adhesive to cure.



800-434-4610  
claridgeproducts.com

#### WARNING

Risk of injury to installers and users  
Read the entire assembly directions before beginning assembly.