




EZ Fit LCS Panels




INSTALLATION INSTRUCTIONS

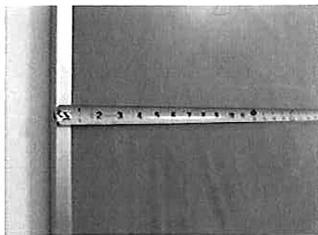


Step 1

Measure portion of board to be covered - including trim. Measure from side to side and from top of trim to top of tray. (Some installations may require measuring inside trim and/or from bottom of rail to top of tray; shy by approx. 1/16" to 1/8").

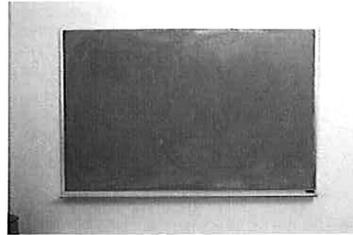

Step 2

Clean surface of existing board. (Some installations - based on overall size - will require adhesive, either troweled with a 1/4" trowel or "gobbed" - depending on depth of old trim - onto the surface of existing board.)

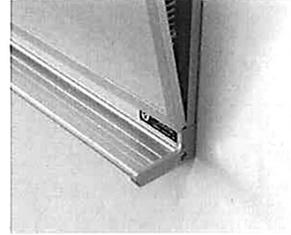

Step 3

Position EZ Fit panel over existing board, resting on tray.



Step 4

Using the pre-drilled holes, drill through the existing board with a 9/64" drill bit. Fasten the board with the 1" Flat Head screws provided.



800-434-4610
claridgeproducts.com

WARNING
Risk of injury to installers and users
Read the entire assembly directions before beginning assembly.