





# EZ Stick LCS Sheets

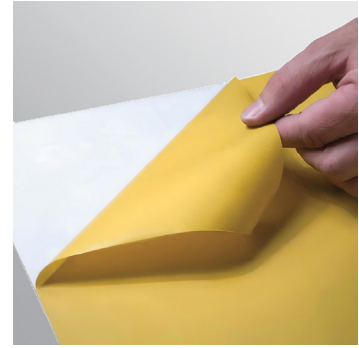

## INSTALLATION INSTRUCTIONS

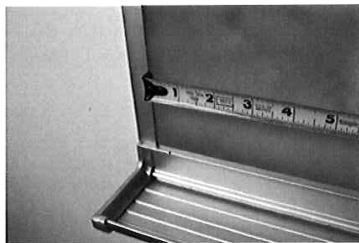


### Step 1

Measure inside existing trim to determine size of EZ Stick skin.




### Step 2

Clean old board surface, removing any obstructions.

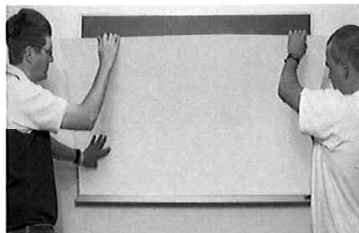


### Step 3

Resting EZ Stick skin on top of bottom trim or on tray, verify fit before removing tape.

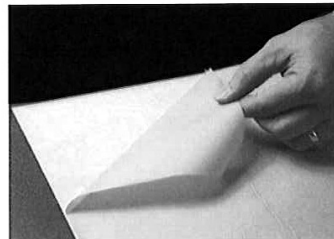

### Step 4

After size has been verified, remove the paper backing exposing the tape. Realign skin before making contact with old board surface.

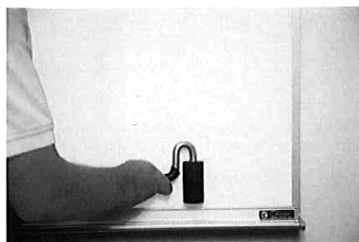

### Step 5

Press the skin in at the bottom, working your way up from the center to the sides. Roll entire surface with a pressure roller applying as much pressure as possible to ensure a good bond.



800-434-4610  
claridgeproducts.com

**WARNING**  
Risk of injury to installers and users  
Read the entire assembly directions before beginning assembly.