


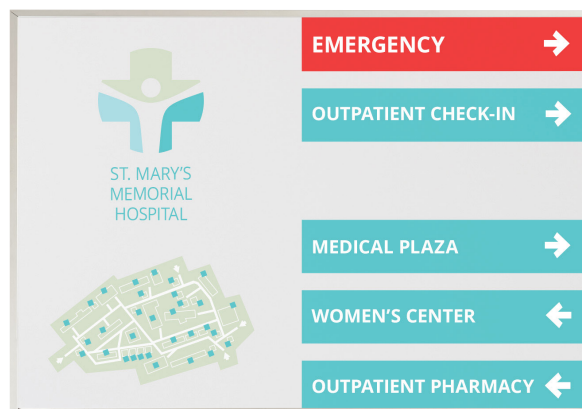

Envision Graphic Markerboards



INSTALLATION INSTRUCTIONS

Tools Needed:

Laser/Level
Drill and drill bit
Screwdriver
Tape measure
Rubber mallet
Safety glasses
Straight edge

Instructions:

1. Mark desired height of the board on the wall.
2. Measure down 2 1/8" and mark a level line. Place the bottom of the Z-Bar hanger on the line and drill in the middle of the slots.
3. Attach the hanger with appropriate wall fasteners. Use a straight edge to check for flatness. Hangers may need to be shimmed accordingly.
4. From the desired height mark. Measure down the height of the board minus 1" and mark a level line.
5. Drill on the line for the L-Clip. Attach the clip with appropriate wall fasteners. Use a straight edge to check for flatness. Hangers may need to be shimmed accordingly. Don't over tighten for the clip will need to be adjustable.
6. Raise the top of the board slightly higher than the Z-Bar hangers. With the board against the wall. Lower the board so the hangers engage. With the board resting on the hangers tap the clips up and secure with the screws provided.

WARNING

Risk of injury to installers and users
Read the entire assembly directions before beginning assembly.



800-434-4610
claridgeproducts.com