



Markerboard

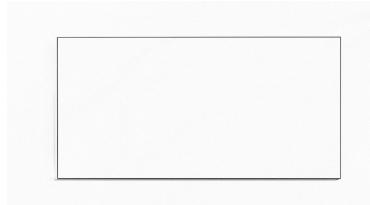

INSTALLATION INSTRUCTIONS

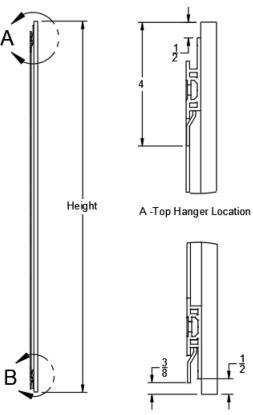

B - Lower Hanger Location

Installation Instructions

- 1. Determine the desired top height for mounting the markerboard panels. Mark a line.
- Measure down 4" from the top line and draw a level line for the top hanger.
- Measure down from the top line the height of the panel. Make a small line. From there, measure up 3/8". Mark a line for the position of the lower hanger.
- Attach hanger using appropriate wall fasteners. Ensure hanger is mounted centered of board width.
- Using a straight edge, shim where necessary so that all anchor points of hanger(s) are in line and level.
- If multiple panels are to be installed in a "run", repeat steps above for hanging each additional panel.

WARNING

Risk of injury to installers and users Read the entire assembly directions before beginning assembly.



800-434-4610 claridgeproducts.com