




Edge Wrapped Tackboard

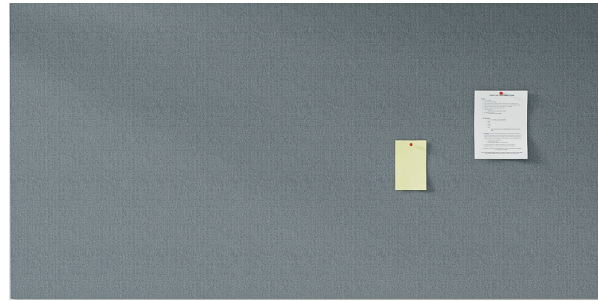

INSTALLATION INSTRUCTIONS

Tools Needed

Tape Measure
Utility Knife/Scissors
Drill/Driver
Level

Instructions

1. Mark the wall for the desired height of the top of the board and the left or right side. Measure down from desired height mark $3/16$ " and make a level line the width of the board.
2. Lay the board face down. Measuring from the side that was marked on the wall. Measure the placement of the hangers on the back of the board.
3. Transfer those measurements to the level line.
4. Drill on the level line. Insert appropriate hardware. Leave approximately $1/8$ " gap between the wall and hardware head.
Note: Make sure the head of the hardware will pass through the opening of the hanger.
5. With the hanger hinged away from the board. Position board so the hardware will pass through the hangers, then lower to secure the board.

For under cabinets and desk hutches with optional hook and loop hold hangers

1. Make sure the wall is clean of any dirt or dust.
2. Make a level line on the wall for the desired height of the board.
3. Engage the hook and loop together and cut the strips that best fits the orientation of the board placement.
4. Peel the paper backer off one side of the strips. Make sure the paper is removed from the same side of all the strips.
5. Depending on the size of the board and strips. Place the strips 2" from the ends and center the additional strips.
6. Press the strips in place making sure the adhesive makes good contact with the board.
7. Peel the paper backer off the strips. Place the board on the level line and press the board to the wall. Make sure the adhesive makes good contact with the wall.



800-434-4610
claridgeproducts.com

WARNING

Risk of injury to installers and users
Read the entire assembly directions before beginning assembly.