



## Premiere Wall-Mount Display Case



### INSTALLATION INSTRUCTIONS

---

#### WARNING

Risk of injury to installers and users

Read the entire assembly directions before beginning assembly.

#### Tools

Drill/Driver

Level/Laser

Rubber Mallet


Utility Knife

Safety Glasses

#### Installation Instructions

1. Remove the angle hangers mounted to the unit. Make sure to identify which one is the top and bottom.
2. Mark a level line on the wall 1/8" lower than the desired height for the bottom of the unit.
3. With the holes in the hanger facing down. Place the bottom hanger on the level line. Drill through the hanger into the wall and fasten hanger with appropriate hardware.
4. From the desired height mark. Measure up the height of the unit minus 3/4" and make a level line.
5. With the holes of the hanger facing up. Place the bottom of the top hanger on the level line. Drill through the hanger into the wall and fasten hanger with appropriate hardware. Note: Both hangers must be plumb with each other.
6. Place the unit in between the hangers. Position the unit so the holes in the hanger and unit are aligned. Attach the hanger and unit together with the screws that were removed earlier.
7. Insert the shelf bracket into the standard. Use a rubber mallet to tap the bracket down insuring the bracket locks into place. Note: Make sure the brackets for each individual shelf are level.
8. Place shelves on the shelf brackets.
9. Place the sliding door track into the door channel. Refer to the sliding door installation instructions on assembling the door hardware. The back door will need to be placed in the unit first.

# Premier Wall-Mount Display Case

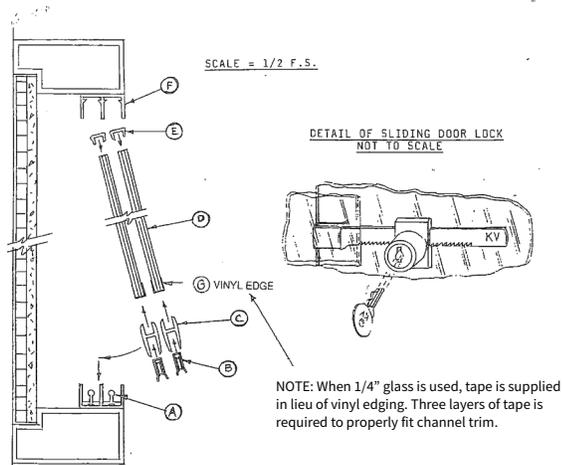

## Sliding Door Installation Instructions

1. Insert door rollers "B" into long portion of "H" shaped aluminum door channel "C" approximately 1 1/2" from each end.
2. Install vinyl glazing "G" on bottom edge of glass doors. Vinyl glazing shipped loose.
3. Slide aluminum door channels "C" onto glass doors "D" at vinyl glazing.
4. Slide rubber door guides "E" onto top of glass doors approximately 1 1/2" from each end.
5. Slip entire door assembly upwards into top track "F" and let rollers "B" rest on round portion of lower track assembly "A".